

086 Model Series

The Big Deal

- Hand Formable
- Tight Bend Radius
- Excellent Return Loss and Insertion Loss
- · Ideal for interconnect of assembled systems

Product Overview

The 086 Series Hand-Flex Coaxial Cables are ideal for interconnection of coaxial components or sub-systems. The construction includes a silver-plated copper-clad steel center conductor which maintains the shape after bending. The outer shield is copper braid, tin soaked, which minimizes signal leakage and at the same time flexible for easy bend. Dielectric is low loss PTFE. Connectors have passivated stainless-steel coupling nut over a gold plated connector body and gold plated, brass center conductor.

Key Features

Feature	Advantages
Hand-Formable RF Cables	The 086 Series Hand-Flex cables are hand formable making them ideal for use integrating coaxial components and sub-assemblies without the need for special cable-bending tools and alleviating the risk of damage during the bending process typical of semi-rigid coaxial cable assemblies.
Tight Bend Radius	Capable of only 6mm bend radius, the 086 Hand Flex series is able to make connections in tight spaces making these cables ideal for dense system integration
Excellent Return loss	Supporting typical return loss of 33 dB to 6 GHz and 21 dB to 18 GHz, the 086 Series Hand-Flex Cables are ideally suited for interconnecting a wide variety of RF components while minimizing VSWR ripple contribution due to mating cables & connectors.
Good Power Handling Capability: • 211W at 0.5 GHz • 35W at 18 GHz	Mini-Circuits 086 Cable series can support medium to high RF power levels enabling these cables to be used in the transmit path. NOTE: power rating is at sea-level altitudes.
Built in Anti-torque nut	Mini-Circuits 086 Series Hand Flex cables include an anti-torque feature to support the connector body during installation alleviating risk of stress to the connector/cable interface.
Jacketed and Unjacketed options	Standard 086 Series cables include a blue FEP insulator jacket reducing the risk of accidental shorting of DC power lines or active pins during installation and operation. Un-jacketed versions are available upon request.





XX= cable length in inches

Mini-Circuits




4 inch DC to 18 GHz **50**Ω

Maximum Ratings

maximani mating					
Operating Temperature	-58	5°C	to 105°C		
Storage Temperature	-55°C to 105°C				
Power Handling at 25°C,	211W	at	0.5 GHz		
Sea Level	150W	at	1 GHz		
	104W	at	2 GHz		
	59W	at	6 GHz		
	45W	at	10 GHz		
	35W	at	18 GHz		

Permanent damage may occur if any of these limits are exceeded


Outline Drawing



Outline Dimensions (inch)

A	B	C1	C2	D
4.0	.36	.313	.250	.36
101.60	9.14	7.95	6.35	9.14
E1	E2	F	T	wt
.313	.250	.108	.05	grams
7.95	6.35	2.74	1.27	7.03

Cable Construction

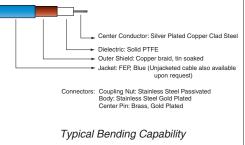



Features

- · Wideband frequency coverage, DC to 18 GHz
- Low Loss, 0.4 dB at 18 GHz
- Excellent Return Loss, 22 dB at 18 GHz · Hand formable to almost any custom shape without special bending tools
- · 6mm bend radius for tight installations
- · Anti-torque nut prevents cable stress during installation
- Insulated outer jacket standard¹
- Connector interface, meets MIL-STD-348
- · Ideal for interconnect of assembled systems

Applications

- · Replacement for custom bent 0.086" semi-rigid cables
- Communication receivers and transmitters
- Military and aerospace system
- · Environmental and test chambers



086-4SM+

CASE STYLE: KP1505-4

Connectors Model 086-4SM+ SMA-Male

+RoHS Compliant The +Suffix identifies RoHS Compliance. See our web site for RoHS Compliance methodologies and qualifications


Electrical Specifications at 25°C


MODEL ¹ NO.	FREQ. (GHz)	LENGTH ² (inch)	INSERTION LOSS RETURN LOSS (dB) (dB)							
			DC - 2 GHz	2 - 6 GHz	6 - 10 GHz	10 - 18 GHz	DC - 2 GHz	2 - 6 GHz	6 - 10 GHz	10 - 18 GHz
	f _∟ -f _∪		Тур. Мах.	Typ. Max.	Typ. Max.	Typ. Max.	Typ. Min.	Typ. Min.	Typ. Min.	Typ. Min.
086-4SM+	DC-18	4	0.05 0.25	0.16 0.44	0.23 0.59	0.34 0.80	46 23	37 23	33 17	26 16

1. Unjacketed cable also available upon request.

2. Custom sizes available, consult factory.

Typical Performance Data						
Frequency (MHz)	Insertion Loss (dB)	Return Loss (dB)				
		SMA-MALE	SMA-MALE			
10.0	0.01	53.99	54.80			
1000.0	0.08	42.41	42.16			
2000.0	0.11	39.41	39.77			
2500.0	0.13	33.84	33.22			
4000.0	0.16	37.80	37.65			
5000.0	0.18	31.22	30.30			
6000.0	0.20	33.60	35.41			
7000.0	0.21	36.79	37.95			
8000.0	0.22	35.61	46.86			
9000.0	0.24	32.47	33.11			
10000.0	0.26	30.05	29.57			
12000.0	0.28	28.07	26.84			
13000.0	0.29	34.48	27.30			
15000.0	0.32	27.61	27.69			
18000.0	0.38	22.53	21.74			

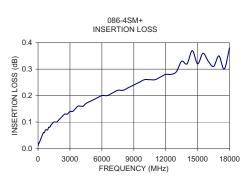

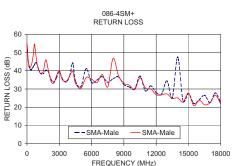

Notes A Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document. B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions. C. The parts covered by this specification document are subject to Mini-Circuit's standard limited warranty and terms and conditions (collective), "Standard Terms"), Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuit's website at www.minicircuits.com/MCLStore/terms.jsp


Rev. A M151107 086-4SM+ RS/CP/AM 151208

Proper Cable Connection Using Anti-Torque Nut

Mini-Circuits 086-series HandFlex[™] interconnect cables are constructed with an anti-torque nut adjacent to the connector coupling nut. When used properly, this feature prevents possible damage to the cable due to torqueing and twisting when tightening the cable connector.

To properly tighten the cable connector:

1) The cable connector includes a coupling nut which rotates to fasten the connector, and an anti-torque nut, which is fixed to prevent the cable from twisting during connection.

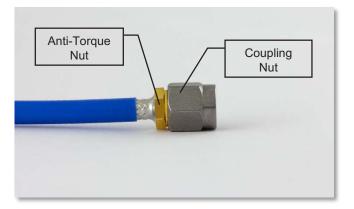

Mini-Circuits

Rotate Clockwise

USB-4SPDT-A18

- 2) To properly tighten the cable, use a Hold Steady standard 3/16-inch open end wrench to brace the anti-torque nut.
- 3) Using a 5/16-inch open end wrench, rotate the coupling nut clockwise to tighten the cable connector.

*NOTE: Mini-Circuits recommends using a 5/16-inch open end wrench calibrated to 8 inch-pounds maximum torque to prevent damage due to over-torqueing the connector.

A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance or torio and performance or torio and performance and performance and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance or torio and performance or torio and performance and performance and performance or torio and performance or torio and performance or torio and performance and perf

Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms"); Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuit's website at www.minicircuits.com/MCLStore/terms.jsp

